The enwi match code



S = standard connection box

- SV = array string connection box
 SG = assembly string connection box
 SA = array string connection box (Outdoor)
- Max. system voltage (Uoc)
- Number of MPP-tracker
 Without = only 1 MPP-tracker
- Number of strings with fuses on +/- "(2x)" e. g. S-1000-(2x)4Sx-...

R = only with parallel clamp

- S = with string fuses
- D = with string-diodes
 T = with disconnect terminal
 (combination is possible e. g. 4RT)
- Value of the string fuse (A)

 x = not included in delivery

"Load breaker" yes/no X = without breaker

T = load breaker, cut-off performed by a switch A = disconnection point, performed by an automatic circuit breaker With breaker:
Load breaker or circuit breaker current

Overvoltage protection:

X = without

Y = "Y"-connection, Class II, "C" M = standard 2 varistors BC = class I/II, "B/C"

String control system:

US = interface monitoring system Without = no placeholder

Material of enclosure:

PC = polycarbonate

11 AL = aluminium PES = polyester ST = steel

12 Update status



